

Changing The Door Direction to Right Hand

1- Remove the top hinge cover on the right.
(Fig-1)



Figure-1

2- Unscrew the screw fixing the top hinge and remove it. (Fig-2)



Figure-2

3- Unscrew the bottom hinge fixing screws and remove it. (Fig-6)



Figure-3

4- Unscrew the stationary foot of bottom hinge and screw to **Hole-1**. Unscrew the hinge pin and screw to **Hole-2**.(Fig-4)

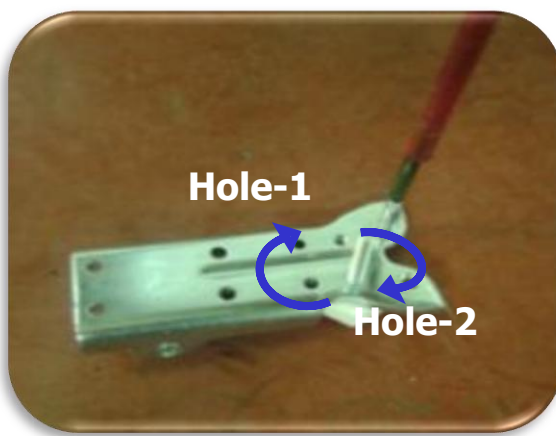


Figure-4

5-Unscrew the stationary foot and front wheel (Fig-5.1) and screw to the right side. (Fig-5.2)



Figure-5.1

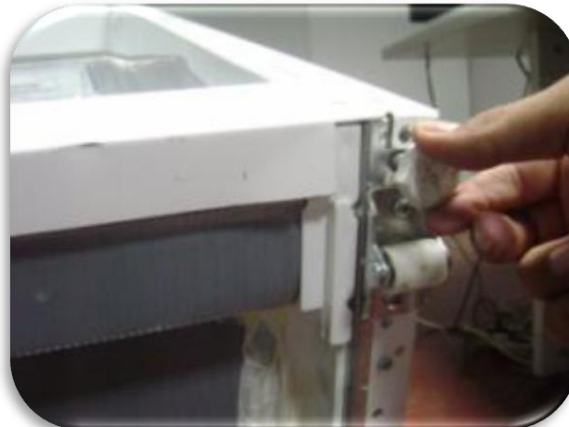


Figure-5.2

6- Remove the bushing and then insert it to the left side. (Fig-6.1 / Fig-6.2)



Figure-6.1



Figure-6.2

7- Remove the bottom bushing and bottom stopper and then insert them to the left side. (Fig-7)



Figure-7



Figure-8

8. Remove the hinge panel cover (Fig-8) and remove it on the right side turn by 180°.

9- Assemble the door. (Fig-9.1 / Fig-9.2)



Figure-9.1



Figure-9.2

10- Unscrew the pin of the top hinge, turn the top hinge by 180° then screw it to the left side hinge holes and screw the pin of the top hinge (Fig-10.1 / Fig-10.2)

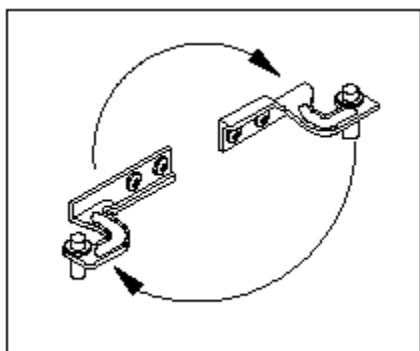


Figure-10.1



Figure-10.2


11- Insert the top hinge cover (which is put in the user manual bag) to the left side. (Fig-11)



Figure-11

Thermostat Setting :

Freezer control

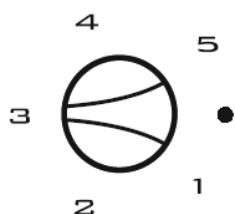

Freezer thermostat automatically regulates the inside temperature of the compartments. By rotating the knob from position “1” to “5”, colder temperatures can be obtained.


Important note: Do not try to rotate knob beyond 1 position it will stop your appliance.

Freezer thermostat setting;

- : This position shows thermostat is closed and no cooling is available.
- 1 – 2 : For short-term storage of food in the freezer compartment, you can set the knob between minimum and medium position.
- 3 – 4 : For long-term storage of food in the freezer compartment, you can set knob medium position.
- 5 : For freezing the fresh food. The appliance will run for colder temperatures.

Note that; the ambient temperature, temperature of the freshly stored food and how often the door is opened, affects the temperature in the freezer compartment. If required, change the temperature setting.

DISPLAY PANEL (Before 20.07.2013)

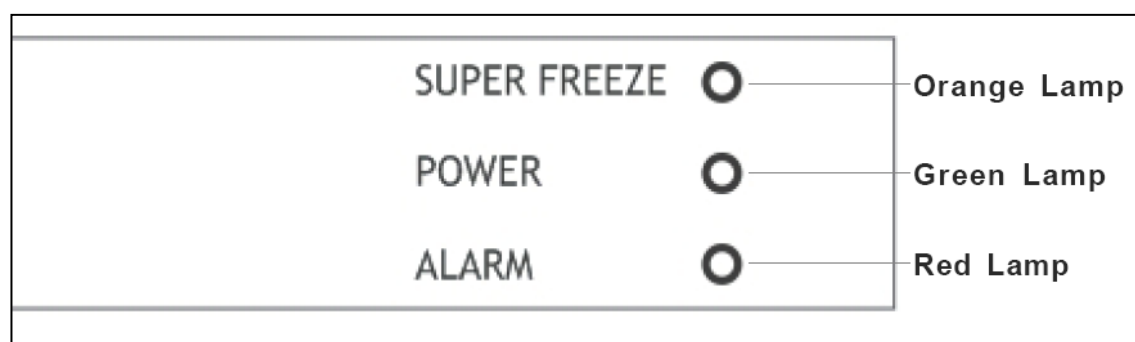

ORANGE LAMP : When the “Super Freezing” operation is on (thermostat dial is in SF position), the orange lamp will turn on.

GREEN LAMP : When the appliance is connected to the power supply, the green lamp on the display panel will turn on automatically.

RED LAMP : When the freezer compartment is not cold enough, the red lamp will turn on. Set the thermostat dial to SF (Super Freeze) position until the red lamp is off. After you get the cold condition you must position to previous position. Check the frozen foods. And if the foods gets thaw, remember to consume them in a short period of time.

FREEZER – 390 (HIDDEN CAP)

REFRIGERANT CYCLE DIAGRAM

